


FERMER-5,0

honeycomb polycarbonate greenhouse

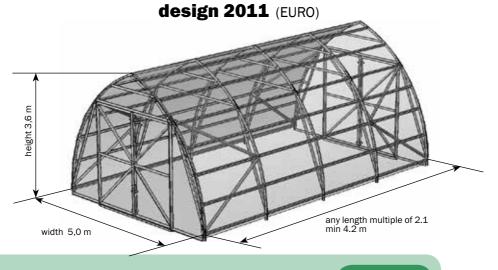

Technical certifica

p. 2-6

Assembly manual

p. 7-27

Technical certificate



Perform assembling and operation of the greenhouse in strict accordance with the manual and operating rules stated in the technical certificate. Please keep this technical certificate for further reference.

Description

The "Fermer" greenhouse is designed and manufactured in accordance with SNiP 2.10.04-85 and generally intended for industrial cultivation of crops at farms and peasant holdings.

Width of the greenhouse is 5 m. Area of covered ground depends on the length of the greenhouse and for minimal length of 4.2 m is 21 m2. Height of the installed frame is 3.6 m.

The frame of the greenhouse is made of galvanized iron 1 mm thick and is to be assembled with screws, nuts and washers. The greenhouse is fixed on the ground without foundation by digging special frame endings or on a fundament using cleater angles. A type of fixing is determined by a buyer.

The greenhouse may be completed with covering on buyer's request.

Number of small windows is conformed to a buyer.

Table 1 COMPLETION WITH PACKAGES, PCS																					
	esr				(bas	FR/sic len	ME gth 4,	2 m)				(f	rame	INS	ERT sion fo	r 2,1 ı	n)				
L greenhouse length, m	N - number of greenhouse sections, excluding	1 FARMER PACKAGE	2 FARMER PACKAGE	3 FARMER PACKAGE	4 FARMER PACKAGE	5 FARMER PACKAGE	6 FARMER PACKAGE	7 FARMER PACKAGE	8 FARMER PACKAGE	9 FARMER- PACKAGE	EXTRA PACKAGE FERMER	1 INSERt PACKAGE	2 INSERt PACKAGE	3 INSER! PACKAGE	4 INSER! PACKAGE	5 INSER! PACKAGE	EXTRA PACKAGE INSERT				
4,2	0															0	0	0	0	0	0
6,3	1											1	1	1	1	1	1				
8,5	2											2	2	2	2	2	2				
10,6	3											3	3	3	3	3	3				
12,7	4											4	4	4	4	4	4				
14,9	5	3	3	2	2	2	2	2	1	1	1	5	5	5	5	5	5				
17,0	6											6	6	6	6	6	6				
19,1	7											7	7	7	7	7	7				
21,2	8											8	8	8	8	8	8				
23,4	9											9	9	9	9	9	9				
2,1(N+2)												Ν	N	N	N	N	N				

. no more kg
. no more kg
11,6
10,5
32,36
L1,12
L7,10
2,62
36,4
18,4
5,0
L1,58
15,7
35,2
1,58
5,0
1

Table 3	Table 3 DETAILED PARTS LIST "FRAME" (4.2 M)						
marking	name	quantity (pcs)	length (m)				
_	1 PACKAGE FERMER						
4	arc	2	3,08				
20	Ridge arc	2	1,759				
	2 PACKAGE FERMER						
5	Arc strainer	2	2,73				
7м	Radial strainer	2	0,3				
1	Foundation stay brace	2	0,84				
11 _B	Girder	1	2,8				
29	Top ridge girder	1	1,76				
3	Support	2	0,30				
	3 PACKAGE FERMER						
2к	End runner	10	2,0				
2кн	Bottom end runner	4	2,0				
	4 PACKAGE FERMER						
укос	Longitudinal stiffness side brace	4	2,36				
	5 PACKAGE FERMER						
9	Stay brace	2	2,70				
10ц	Central strainer	1	2,72				
1	Foundation stay brace	2	0,84				
3	Support	2	0,3				
Π-11	Strip of a top girder	1	2,67				
П-9	Strip of a gate opening stay brace	2	2,62				
	6 PACKAGE FERMER						
26	Side brace	2	1,14				

Technical certificate

Technical certificate

Table 3 DETAILED PARTS LIST "FRAME" (4.2 M)							
marking	name	quantity (pcs)	length (m)				
7 PACKAGE FERMER							
13в	Cleat	4	1,28				
13вн	Bottom cleat	2	1,28				
12вп	Right stay brace	2	2,6				
12вл	Left stay brace	2	2,6				
16к	Guiding bracket	8	0,08				
14в	Diagonal	4	1,727				
П12вп	Strip of a right stay brace	2	2,6				
П13вн	Strip of a bottom cleat	2	1,28				
	Hasp	4	0,91				
	8 PACKAGE FERMER						
	Bolt M6x10 DIN 965	344					
	Bolt M6x14 DIN 933	658					
	Bolt M6x20DIN 933	74					
	Nut M6 DIN 934	1076					
	Bracket 26x17x16 (angle)	200					
	Hanger	12					
	Hinge ПН 1-130 left	4					
	Hinge ПН 1-130 right	4					
	Straight lug 40x90	4					
	Pull PC-80-2	4					
	Washer 6	692					
	Washer 6,3	320					
	Self-driving screw M4,8x22 DIN 7981	200					
	Penofol	1	15,7				
	Door seal	1	26				
	End seal	1	19				
	9 PACKAGE FERMER						
	Outermost ridge	2	2,1				

Table 3	Extra package base		
	Ridge shape	2	2,10
	Top draw band	3	8,42
	Bottom draw band	6	0,60
	Top arc base sheet	2	1,67
	Bottom arc base sheet	2	2,91
	Outermost base sheet for a runner	4	1,95
	Tingle	20	0,09
	Outermost shape	4	2,10
	Washer 32x6	24	
	Bolt M6x14	52	
	Bolt M6x20	24	
	Bolt M6x60	6	
	Nut M6	82	
	Washer 6	88	
	Double-size scotch tape	2	5 м

Table 4 DETAILED PARTS LIST "INSERT"						
marking	name	quantity (pcs)	length (m)			
1 PACKAGE INSERT						
20	Ridge arc	2	1,76			
4	Arc	2	3,1			
	2 PACKAGE INSERT					
5	Arc strainer	2	2,73			
7м	Radial strainer	2	0,3			
1	Foundation stay brace	2	0,84			
11в	Girder	1	2,8			
29	Top ridge girder	1	1,76			
3	Support	2	0,30			
	3 PACKAGE INSERT					
2	Main runner	10	2,1			
2н	Bottom main runner	4	2,1			
	4 PACKAGE INSERT					
	Bolt M6x14 DIN 933	86				
	Bolt M6x20DIN 933	44				
	Nut M6 DIN 934	130				
	Washer 6	122				
	Washer 6,3	30				
5 PACKAGE INSERT						
	Ridge	1	2,2			

 Δ

Table 4	Extra package insert		
	Ridge shape	1	2,10
	Top draw band	1	8,42
	Bottom draw band	2	0,60
	Top arc base sheet	2	1,67
	Bottom arc base sheet	2	2,91
	Outermost base sheet for a runner	2	2,04
	Tingle	20	0,09
	Main shape	2	2,10
	Washer 32x6	12	
	Bolt M6x14	34	
	Bolt M6x20	12	
	Bolt M6x60	2	
	Nut M6	48	
	Washer 6	50	
	Double-size scotch tape	1	5 м

WARRANTY LIABILITIES



It is not allowed to install the greenhouse without fastening on the ground because of the large sail area of the greenhouse and the possibility of floating away the unfastened greenhouse.

- 1. The manufacturer bears responsibility for the greenhouse frame complete setup.
 - 2. The manufacturer bears responsibility for the greenhouse assemblability in accordance with the manual.
- 3. The manufacturer bears responsibility for the greenhouse durability under specified magnitude of atmospheric actions.
 - 4. Claim presentation period is 12 months from the date of purchase.

Warranty conditions

Warranty liabilities do not apply to cases of:

- 1. Greenhouse installation with violation of requirements of the manual.
- 2. Violation of the rules of operation.
- 3. Inappropriate use of the greenhouse.
- 4. Floods, hurricanes and other natural disasters.

Date of manufacture:

Manufacturer: VOLYA LLC,
per. Severny, 8, Dubna, Moscow region, 141983, Russia.

The manufacturer bears responsibility for quality of products in accordance with RF CC. The manufacturer reserves the right for greenhouse engineering design changes.

RULES OF OPERATION

The greenhouse should be serviced in the winter period. The greenhouse has durability under the action of snow loads way more than is required for greenhouses, but less for some snow areas in comparison with the general construction standards. According to SNiP 2.10.04-85 «Greenhouses and seedbeds» «weight of snow blanket on 1 m2 of horizontal surface of the ground in design of static greenhouses...» should be taken from 10 to 40 kg/m2 depending on a snow region. This is much less than the general construction standards for snow load, because it is assumed that on the current greenhouses a snowcap is not preserved until the next snowfall. According to the results of strength tests the limits of durability of the greenhouse frame are revealed: destroying snow load is 240 kg/m2, permissible load (with safety coefficient 1.4) - 180 kg/m2. The permissible load approximately corresponds to the thickness of fresh snow 0.9 m and settled snow 0.45 m.

If the greenhouse is not heated in winter, or it is supposed to use the greenhouse as an unheated housing, awning, warehouse, etc., it is necessary to control the snowcap (to shift the snow down with a wooden or plastic scraper, installed on a pole). For these variants of operation it is possible to supply reinforced frames with a reduced interval between the power arcs under the snow load specified by the customer.

Do not allow damage to the frame, and if it happened, then hold timely repairs.

Cleaning and washing of polycarbonate sheets.

- 1. Rinse sheet with warm water.
- 2. To remove dirt, wash it with mild soap solution or domestic detergent using a soft cloth or sponge.
- 3. To remove water, rinse the sheet with cold water and wipe it with a soft cloth.



Never use abrasives or high-alkali detergents for cleaning polycarbonate sheets. Dry wiping damages covering layer of the covering and shortens its service life. Never rub surface of polycarbonate sheets with a brush, metalized fabric or other abrasive materials.



Do not use sulphur cartridges for disinfecting greenhouse against fungal and bacterial agents in order to prevent corrosion (darkening) of the frame.

"FERMER" GREENHOUSE INSTALLIATION MANUAL

Introduction

1. The general view of the frame is presented in **fig. 1**. The frame is assembled from the shape numbered parts. Medium shape shelves are facing the covering..

Some parts have free holes

resulted from uniformity of

Do not break the instructions!

without washers, for this leads

to strength reduction of the

Do not install bolts with nuts

parts.

frame

Indexes:

- 2. **m** small;
 - **6** big;
 - **K** outermost (along the length of greenhouse);
 - н bottom;
 - **ц** central;
 - **Δ** a door:
 - **π** right;
 - Λ left;
 - **Π** a strip;
 - → the arrow indicates installation direction according to manuals' schemes.

Terminology:

- Left side is from the left when standing outside of the greenhouse in front of the door.
 - **Right** side is from the right when standing outside of the greenhouse in front the door.
- 4. Assembly units are lettered and shown in figures. The greenhouse is assembled by means of bolts of M6, nuts, washers, screws, etc. Joints are accomplished by overlapping of details and by fastening across the holes. Install bolts, nuts and washers in all places indicated in the instruction.
- 5. The greenhouse assembly is presented in stages, at each stage the assembly units "before" and "after" are shown. The figures of the units do not show the nuts with washers that are installed from the inside of the shape.
- 6. When assembling, be careful not to damage parts since they are not rigid enough until they are fully assembled.

Use additional tools to assemble:

- -a wrench 10;
- -a screwdriver
- -a drill with a borer 6.5;
- -a stepladder 3m high;
- -a fret saw;
- -a knife.



Be careful while assembling! Parts have sharp angles. Avoid hand cuts! Work in protective gloves.

INSTALLATION SEQUENCE

Stage	name	page
1	End wall assembly	12-14
2	Installation of runners on the end wall	14
3	Power arc assembly	15
4	End section assembly: end section assembly; Installation of longitudinal stiffness side braces on the end section	16
5	End section installation	16
6	Extension of the frame length by the insert	17
7	Doors assembly	18-20
8	Installation of covering and seals	21-28

GENERAL VIEW OF THE GREENHOUSE FRAME WITH EXTENDING INSERTS


Fig. 1 General view of the greenhouse with two inserts, total length is 8.4 m.

Fig. 1a

ONE "INSERT" extends
the greenhouse by 2.13 m.
Number of the inserts for the
greenhouse is not limited

Fig. 16
General view of the greenhouse with an insert.

GENERAL VIEW OF THE GREENHOUSE FRAME WITH EXTENDING INSERTS

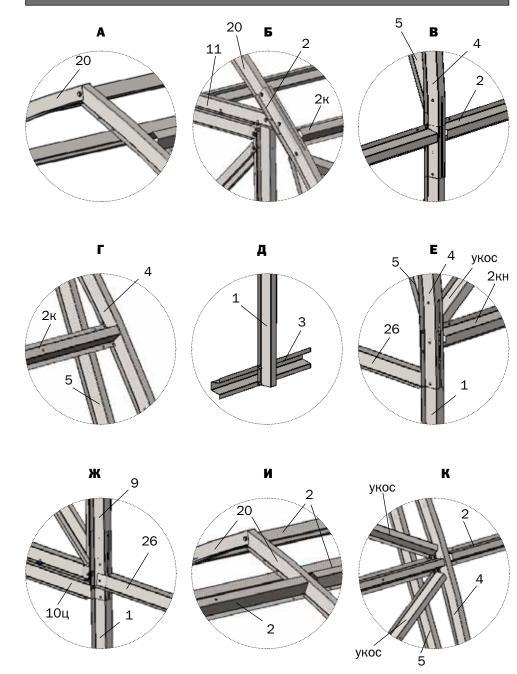


Manual Manual


INSTALLATION SEQUENCE


STAGE 1


Assembly of the end wall.

Assembly is carried out according to the **figure 1.1.**

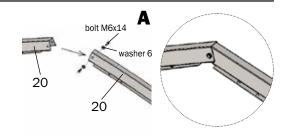


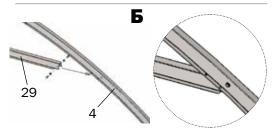


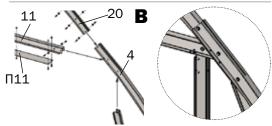


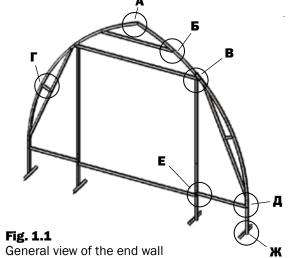

INSTALLATION SEQUENCE

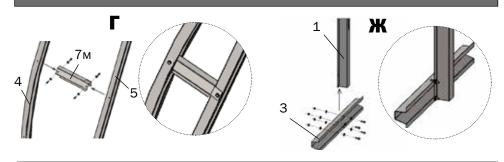

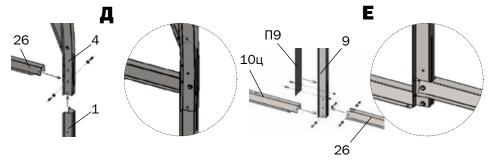


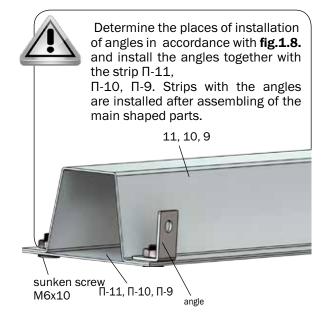

Manual Manual

INSTALLATION SEQUENCE

Fig. 1.8 angles for fastening of polycarbonate.

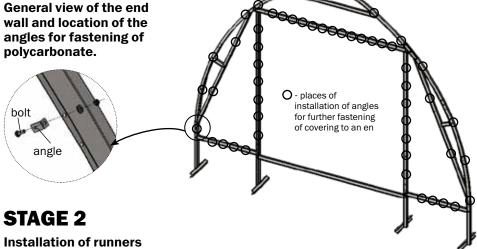


Assembly is carried out according to the fig. 2.

on the end wall.

14

The assembled end wall is installed in the horizontal plane. To arcs 4 and 20 and girders of the end wall are alternatively joined

vertical under their own weight and abut against side walls of shapes of arcs 4 (until the next operation).

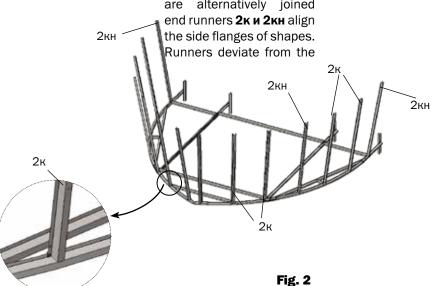

INSTALLATION SEQUENCE


STAGE 3


Assembly of the power arc Assembly of the power arc is carried out in a horizontal plane similar to the assembly of the end wall.

STAGE 4

End section assembly.

Assembly is carried out according to the fig.4.1. The assembled power arc is brought to the end wall with the installed runners, is raised to the height of the end runners and joined with their upper ends. It is recommended to connect the outermost and middle runners first. For the initial fixation of the power arc on the runners, participation of three people is required for holding of the frame.

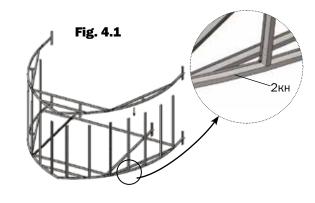

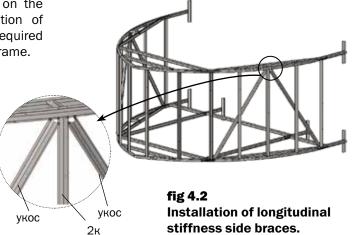

INSTALLATION SEQUENCE

STAGE 5

End section installation

In the variant of installation of the greenhouse without a foundation, marking of axes is made on the ground in accordance with fig. 5.1 and holes 70 cm deep are dug for foundation stay braces with supports. In the variant of installation of the greenhouse on a foundation in accordance with fig. 5.1, cleater angles are mounted to the foundation for the subsequent fastening on them bottom ends of arcs in accordance with fig. 5.2 without foundation stay braces.

The end section is lifted and placed in a vertical position on the prepared


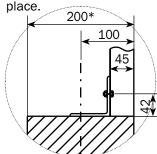


Fig. 5.2

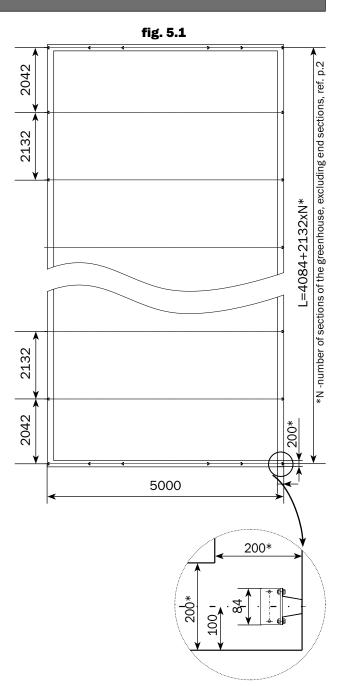

INSTALLATION SEQUENCE

STAGE 6

Extension of the frame length.

Assembled power arc (or other end wall, depending on the needed length of the greenhouse) is brought to the assembled end section at the distance of the main runner and joined to it with the use of main runners 2 and 2H align the side flanges of shapes (fig. 6).





Fig. 6

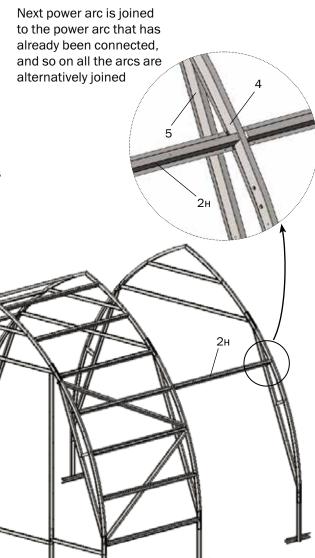



Manual Manual


GATE ASSEMBLY

STAGE 7


Gate assembly. The gate is assembled in the same way. Joints are shown in the figures. Strips and other surface mounted components are installed after the main shape parts are assembled.

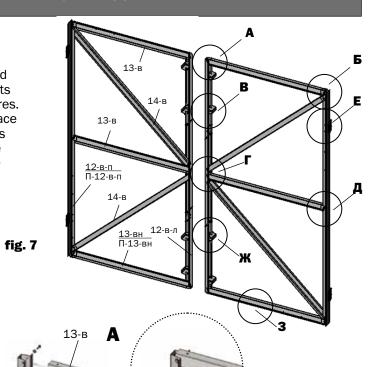


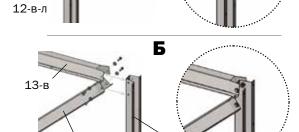


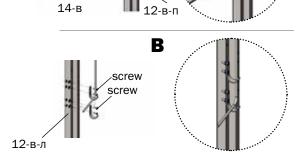



GATE ASSEMBLY

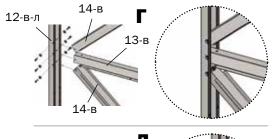

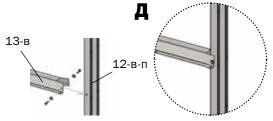

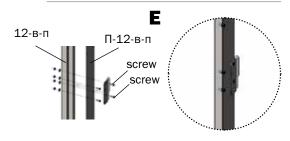

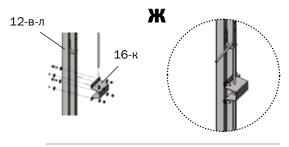


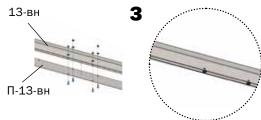

Manual

Manual

GATE ASSEMBLY

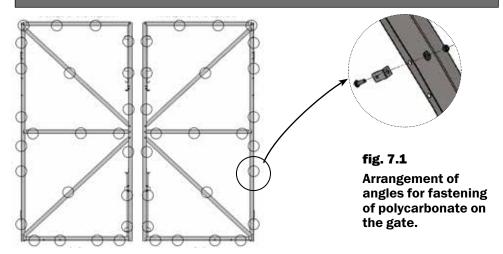

STAGE 8

Installation of covering




Install honeycomb polycarbonate with a specified side facing outwards (sunward); this side has a covering layer (make sure to clarify it on buying or prior to installation). Covering layer is usually placed on the side with notations on the shipping film. The film is transparent on the opposite side of a sheet. After marking the sheet but prior to cutting it, mark the side with the covering layer on each piece of the sheet: when the shipping film is removed sheet sides look the same. Shipping film shall be removed from the both sides immediately before fastening covering on the frame.





Cut the sheets using a fret saw or a fine-pitch arm saw.

CUTTING LIST OF COVERING OF AN END

CUT POLYCARBONATE SHEET IN STRICT ADHERENCE TO FIG. 10.3 Honeycomb polycarbonate sheet size 2100 x 12000 MM

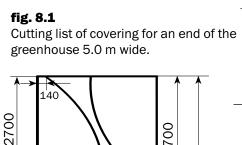

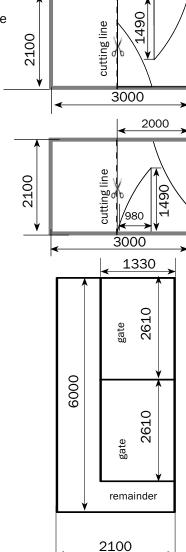


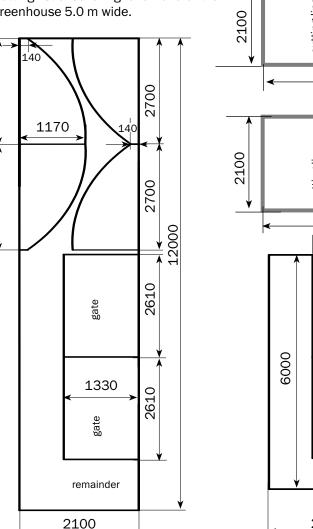


FASTENING OF COVERING


Fasten the pieces of covering on the end to the angles with the use of washers and self-tapping screws (fig.8.2).

Places of fastening of pieces of covering to each other with the use of a permanent polycarbonate connecting shape are shown in **fig.8.3.**

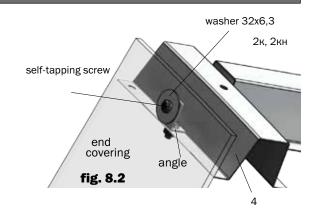

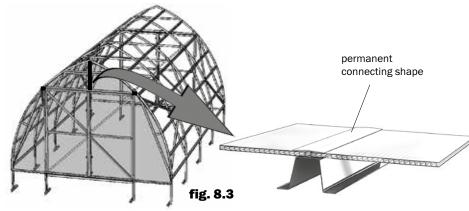


Using a knife, adjust covering pieces to arcs 4 and girder 20, and then install sealing profile in accordance with fig.8.4

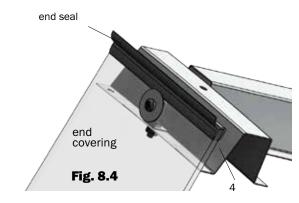

FASTENING OF COVERING


Manual

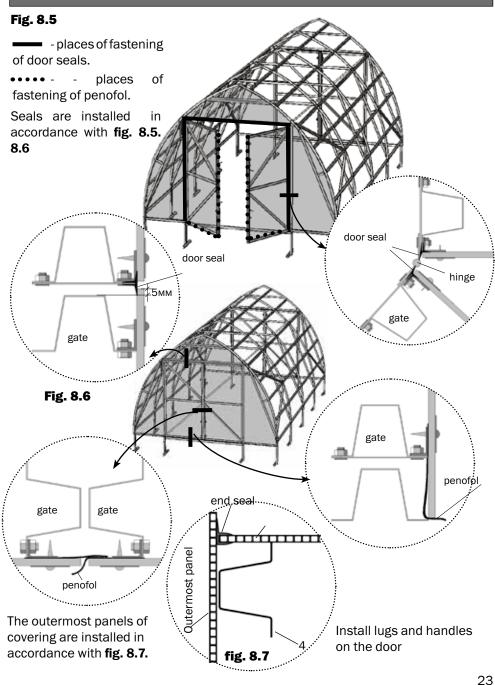


Manual

FASTENING OF COVERING

First install all the joining plates and tingles on arcs

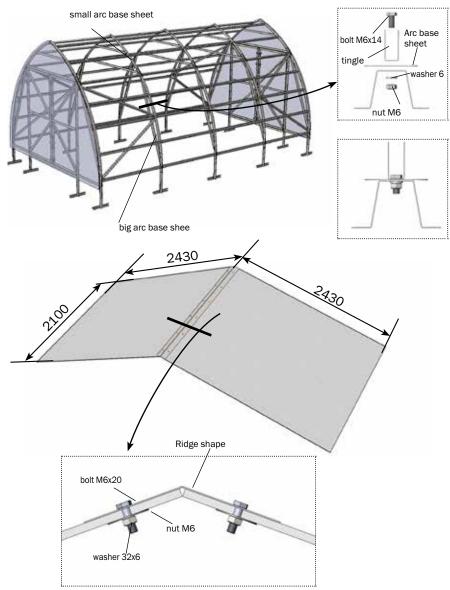

FASTENING OF COVERING

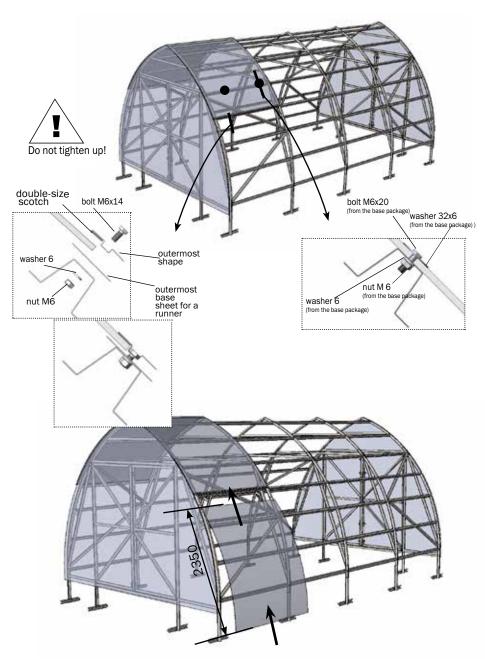

Manual Manual

FASTENING OF COVERING

washer 32x6 (from the base package) bolt M6x20 (from the base package) washer 6 (from the base package) nut M6 (from the base package) top draw band Bore out holes in top draw band detail №1 according to holes in bottom draw band washer 6 bottom draw band bottom draw band

26

FASTENING OF COVERING

